

Ewon ファクトリーリセット手順

発行日:2025/9/22



1. Reset Button

各 Ewon のリセットボタンは以下図のよう配置されております。

OCosy131 及び Cosy+

下図 1 番に配置されております。

#	Description
1	Reset button
2	Status LEDs
3	LAN/WAN Ethernet ports and corresponding status LEDs: <ul style="list-style-type: none">Orange: WAN portGreen: LAN port
4	USB slot
5	SD card slot



OFlexy205

下図 2 番に配置されております。




1	LED panel.
2	RESET button - BI1.
3	SD card slot.
4	Main connector. Used to connect the power supply and the digital I/O.
5	2 slots fillers. Can be removed and replaced by extension cards.
6	Main board communication interfaces: 4 Ethernet Ports.

2. LED の配置

- LED の配置は下図の通りです
- Reset ボタン押下時には、 BI1 (及び PWR)が点灯します

OCosy131 及び Cosy +

Label	Description
BI1	<i>Reset Button</i> Steady green = reset button is being pressed
PWR	<i>Power</i> Steady green = unit is powered on
USR	<i>User</i> • Blinking green slowly = Unit is ok • Orange pattern = special attention required
KEY	<i>Digital IN 1</i> Green = ON : Signal on Input 1 detected See Digital Output & Digital Inputs (page 35) section.
DI2	<i>Digital IN 2</i> Green = ON : Signal on Input 2 detected See Digital Output & Digital Inputs (page 35) section.
T2M	<i>Talk2m</i> • Green = ON : Talk2m VPN connection established • Blinking green = A user is connected to this Ewon Ewon® Cosy + through Talk2m (= active remote connection) See Digital Output & Digital Inputs (page 35) section.
@	<i>Internet</i> Steady green = Internet is configured on the Ewon Ewon® Cosy +

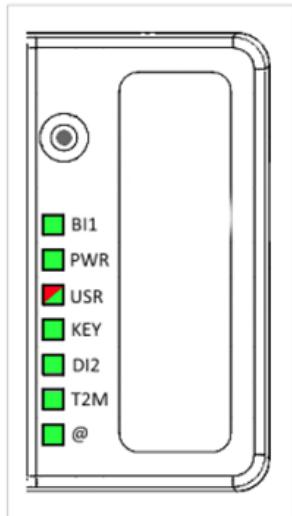

OFlexy205



Label	Definition
PWR	Power Steady green = unit is powered on.
USR	User Blinking green slowly = Unit is ok Red pattern = special attention required.
DI1	Digital IN 1 Green = ON : Signal on Input 1 detected.
DI2	Digital IN 2 Green = ON : Signal on Input 2 detected.
DO	Digital output Green = ON : Signal on Output detected.
T2M	Talk2m Green = ON : Talk2m VPN connection established.
BI1	Button BI1 input Steady green = reset button is being pressed.

3. ファクトリーリセット手順

- ① 電源オフの状態でリセットボタンを押したまま、電源をオンにします
- ② USR LED が赤点滅後、赤点灯するまで、少し長く押し続けます (30秒～1分超かかります)
(※ 機種や設定状況によっては2分を超える可能性もございます。)
- ③ 赤点灯後リセットボタンを離します
- ④ リセットボタンを離すと、緑点滅を開始します
(*この間電源を抜きますとファームウェア損傷の原因となります)
- ⑤ リセットが正常に行われますと、ゆっくり赤点滅します(1.5秒間隔)
- ⑥ 手動で Ewon デバイスの再起動を行う必要があります(電源のオフオンをして下さい)